


- Installs the same as standard post-frame columns
- Builds the same as post-frame construction
- Lasts for generations

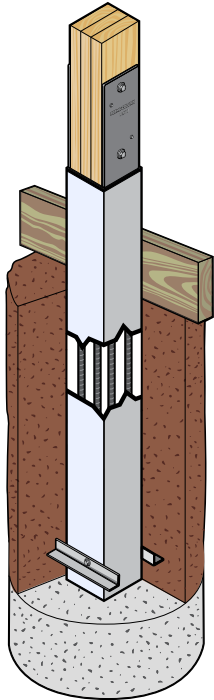


**HOW TO INSTALL:** Place concrete pads or equivalent in bottom of hole. Tilt Perma-Column® off skid-loader forks into post hole. Perma-Column® must be placed so that the top of the precast concrete is above finished grade no more than 12-inches and no less than 8-inches in accordance with IBC Section 2304.12.2.2. Plumb the column using standard leveling procedures. Backfill the hole with suitable compacted soil, wet-poured concrete, or a self-leveling and self-compacting cementitious material.


**IMPORTANT NOTE:** Steel bracket and the concrete column must not be cut or modified in any way.




**Precast concrete footing pad with uplift anchors**

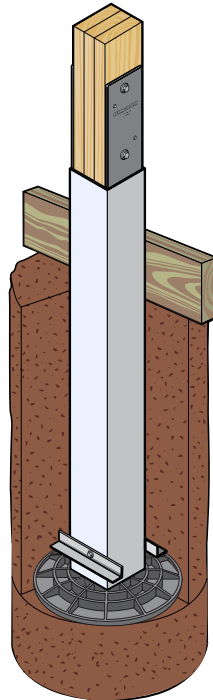


**Composite footing pad with uplift anchors**

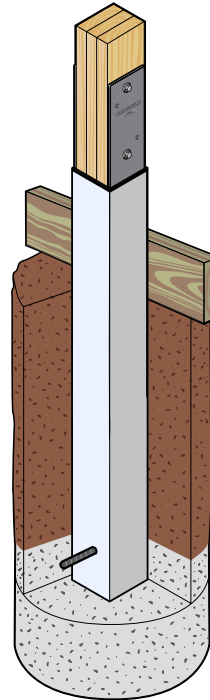

**Concrete collar**

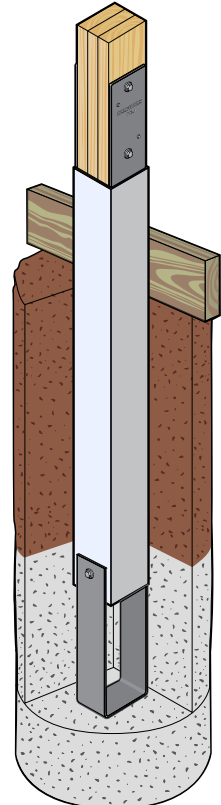

**Column extender**



Attach uplift anchors and column extenders to sleeve\* at bottom of Perma-Column® with 1/2" bolt, tighten firmly until component stops rotating. 1/2" x 7" bolt and nut required for PC6300, PC6400 and PC6600. 1/2" x 9" bolt and nut required for PC8300, PC8400 and PC8500.

\*If sleeve is not visible, lightly tap concrete 2 3/4" up from the bottom of the post to expose the steel sleeve.


### Fasteners required to secure wood columns to steel bracket:

- (4) 1/4" x 3" Structural screws required (refer to ESR-4238 for specifications) for PC6300, PC6400 and PC6600.
- (8) 1/4" x 3" Structural screws required (refer to ESR-4238 for specifications) for PC8300, PC8400 and PC8500.
- (2) 1/2" x 6" SAE J429 Grade #5 HHCS bolt, nut and washer required for PC6300 and PC8300.
- (2) 1/2" x 7" SAE J429 Grade #5 HHCS bolt, nut and washer required for PC6600.
- (2) 1/2" x 8" SAE J429 Grade #5 HHCS bolt, nut and washer required for PC6400, PC8400 and PC8500.


**Drilling instructions:** Holes must be drilled precisely perpendicular to column; widening misaligned holes in wood or steel is not acceptable.

**Torque requirements:** When using 1/2" SAE J429 Grade #5 bolts, insert into drilled holes and tighten nuts to approximately 110-foot pounds of torque.

**NOTE:** Download our product guide for solid, nail lam and glu lam model options and associated hardware kits, available on our website.

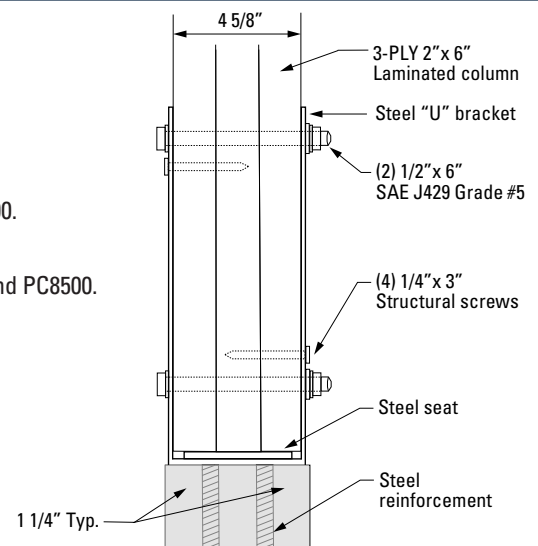


## SKIRTBOARD ATTACHMENT

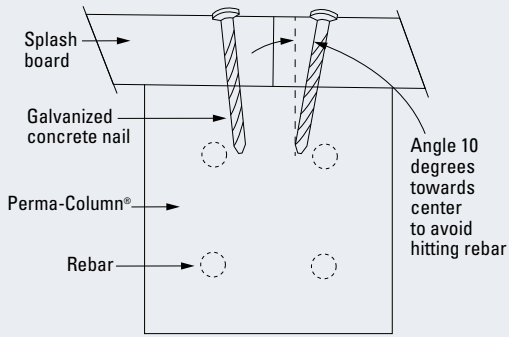


1. Drill 3/16" hole with masonry drill bit (1 1/4" deep)
2. Locate hole 1 3/4" from edge and angle 10 degrees
3. Use galvanized 3/16" x 2 1/2" concrete nails

**NOTE:** Avoid using concrete screws and concrete nail gun. Most are not designed for high-strength concrete and result in screws being stripped, heads twisting off, or surface chipping.


## OHD DOOR JAMB

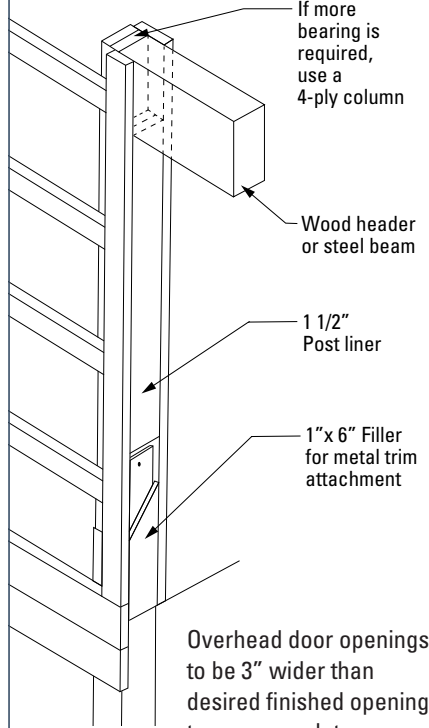

## SLIDE DOOR JAMB

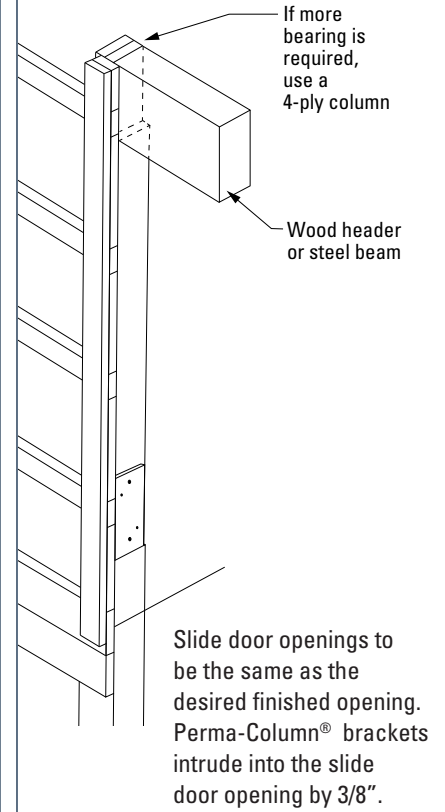

## TYPICAL BUILDING CORNER CONSTRUCTED WITH PERMA-COLUMN®

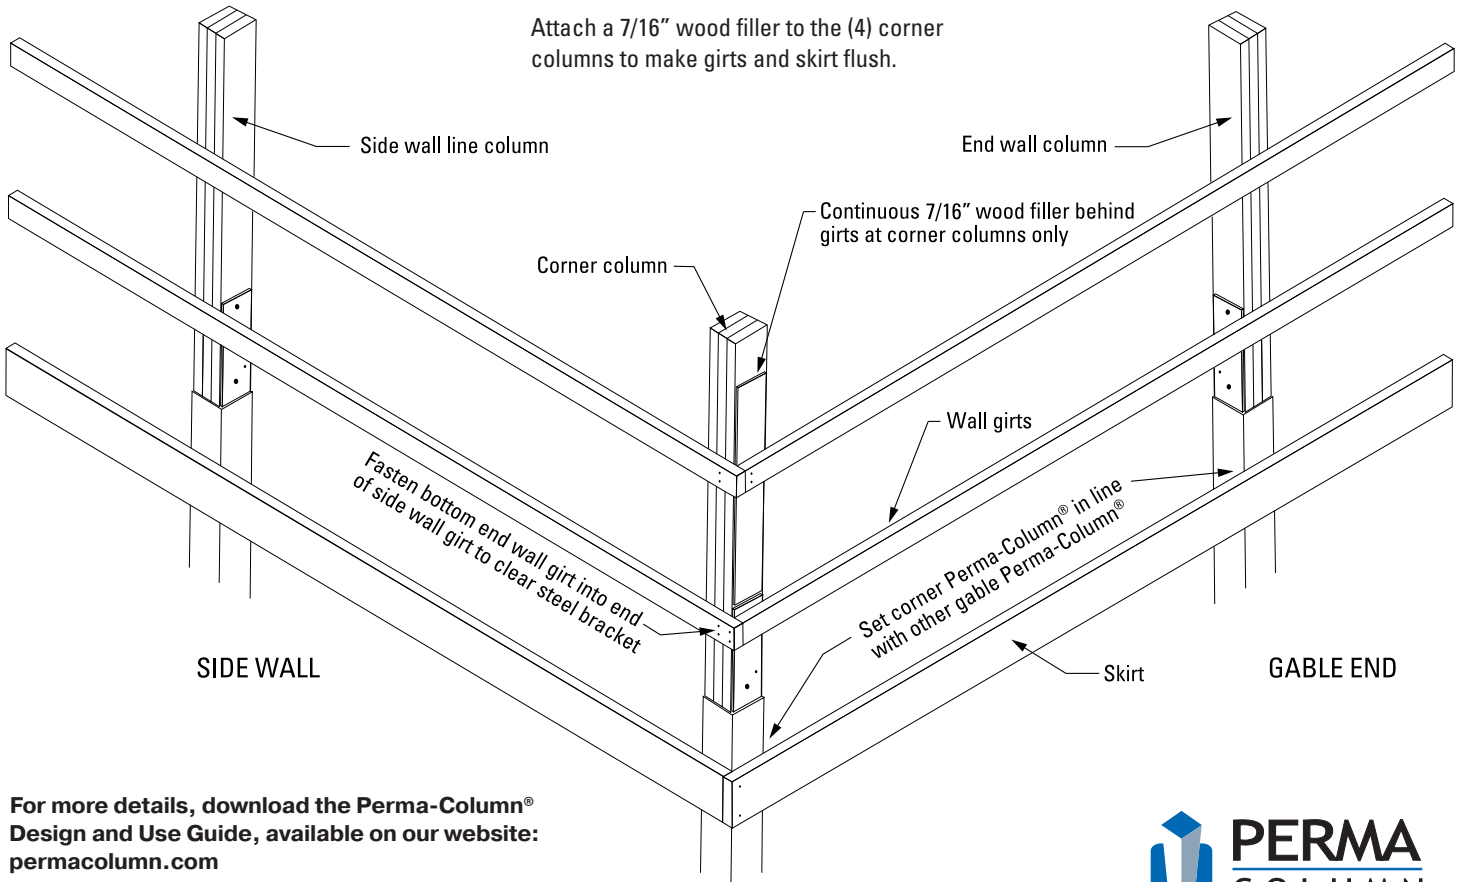

For more details, download the Perma-Column® Design and Use Guide, available on our website: [permacolumn.com](http://permacolumn.com)

**BUILD BETTER. BUILD STRONGER. BUILD TO LAST.**

© 2021 Perma-Column, LLC All rights reserved. 21-PC-37\_installation-guide

**PERMA**  
COLUMN.  
[permacolumn.com](http://permacolumn.com)